

TABLE OF CONTENTS

FOREWORD

Chapter		Page
1	INTRODUCTION	1-1
1.1	PURPOSE AND SCOPE	1-1
1.2	REFERENCE MANUALS	1-1
1.3	ORGANIZATION OF MANUAL	1-1
1.4	LEVELS OF MAINTENANCE	1-2
2	INSTALLATION	2-1
2.1	RECEIVING THE SHIPMENT	2-1
2.1.1	Weights and Measures	2-1
2.1.2	Unloading the Shipment	2-1
2.1.3	Shortages and Damage	2-1
2.2	PREPARATION OF THE MACHINE LOCATION	2-1
2.2.1	Foundation and Clearances	2-1
2.2.2	Electrical Service	2-1
2.2.3	Pneumatic Service	2-1
2.3	LIFTING THE MACHINE	2-3
2.3.1	On-Skid Transportation	2-3
2.3.2	Removing from Skid	2-3
2.4	PREPARATION FOR OPERATION	2-3
2.4.1	Removal of Shipping Blocks	2-3
2.4.2	Cleaning the Machine	2-4
2.4.3	Leveling the Machine	2-4
2.4.4	Auxiliaries	2-4
2.4.5	Spindle Trammeling	2-5
2.4.6	Pinning the Milling Head to the Ram	2-5
2.4.7	Inspection of Electrical Enclosures	2-5
2.4.8	Electrical Connections	2-6
2.5	MACHINE INITIALIZATION	2-6
	Start-Up Sheet	2-8
3	MACHINE COMPONENTS AND SYSTEMS	3-1
3.1	THE SERIES II CNC MACHINE	3-1
3.1.1	The Base Assembly	3-1
3.1.2	Gib Adjustment	3-2
3.1.3	The Milling, Drilling and Boring Head	3-2
3.1.4	Z-Axis Drive	3-2
3.1.5	The Quill and Spindle	3-4
3.2	THE CNC SYSTEM	3-4
3.2.1	Operator Control Subsystem	3-4
3.2.2	The CNC Unit	3-4
3.2.3	Interface Subsystem	3-4
3.2.4	Power Subsystem	3-4
3.3	AXIS DRIVES	3-4
3.3.1	Axis Drive Subsystem	3-4
3.4	LUBRICATION SYSTEM	3-5
3.4.1	Overview	3-5
3.4.2	Way System Lubrication	3-5
3.5	PNEUMATIC SYSTEM	3-5
3.5.1	General Description	3-5
4	POWER DISTRIBUTION	4-1
4.1	INTRODUCTION	4-1
4.2	SYSTEM OVERVIEW	4-1
4.3	SYSTEM PROTECTION	4-1
4.3.1	Signal Ground	4-1
4.3.2	Shielding	4-1
4.3.3	Noise Suppression	4-1
4.4	PROTECTIVE GROUND	4-1

TABLE OF CONTENTS

(Continued)

Chapter		Page
4.5	LINE VOLTAGE DISTRIBUTION BRANCH	4-3
4.5.1	Spindle Motor Protection	4-3
5	THE TNC-145 AND ITS INTERFACE	5-1
5.1	ARRANGEMENT OF TNC-145	5-1
5.1.1	General Description	5-1
5.1.2	Board Complement	5-1
5.2	INTERFACE	5-3
5.2.1	Machine Parameters	5-3
5.3	REPLACEMENT	5-6
5.3.1	Exchanging the TNC-145	5-6
5.3.2	Exchanging the Program IC's	5-6
6	AXIS DRIVE SYSTEM	6-1
6.1	GENERAL DESCRIPTION	6-1
6.2	THE CNC UNIT	6-1
6.3	THE DC SERVO MOTOR	6-1
6.4	TRANSMISSION AND RESOLUTION	6-1
6.5	CONNECTION DIAGRAM	6-3
6.6	THE BOSCH SERVO AMPLIFIER	6-4
6.6.1	General Arrangement and Specification	6-4
6.6.2	Power Supply	6-4
6.6.3	Regulator and Optimisation Module	6-4
6.6.4	Power Bridge	6-6
6.7	AXIS DRIVE ADJUSTMENTS	6-9
7	TROUBLESHOOTING	7-1
7.1	INTRODUCTION	7-1
7.1.1	Procedure	7-1
7.2	ELECTRICAL POWER TEST	7-1
7.2.1	Incoming Power	7-1
7.2.2	+ 24 VDC Power Supply	7-5
7.3	ERROR MESSAGES	7-5
7.4	AXIS STALLING	7-5
7.5	AXIS MISPOSITIONING	7-5
7.6	SPINDLE FAILURE	7-5
7.7	OVERLOAD RELAY TRIPOUT	7-6
8	DIAGNOSTICS	8-1
8.1	FAULT INDICATORS	8-1
8.2	ERROR MESSAGES	8-1
8.3	ERROR MESSAGES ANALYSIS AND CORRECTION	8-1
9	PREVENTIVE MAINTENANCE	9-1
9.1	INTRODUCTION	9-1
9.2	OVERVIEW	9-1
9.3	EQUIPMENT AND SUPPLIES	9-1
9.4	DESCRIPTION OF MAINTENANCE PROCEDURES	9-1
9.5	OPERATOR MAINTENANCE REQUIREMENTS	9-2
9.6	CLEANING PC CARDS	9-5
9.7	AUXILIARIES SYSTEMS	9-5
9.8	BATTERY REPLACEMENT	9-5
10	BASE ASSEMBLY	10-1
10.1	INTRODUCTION	10-1
10.2	X AND Y-AXIS DRIVE MOTORS	10-1
10.2.1	X-Axis Drive Belt Adjustment	10-1
10.2.2	X-Axis Drive Belt Replacement	10-1

TABLE OF CONTENTS

(Continued)

Chapter		Page
	10.2.3 X-Axis Drive Motor Replacement	10-1
	10.2.4 Y-Axis Drive Belt Adjustment	10-2
	10.2.5 Y-Axis Drive Belt Replacement	10-2
	10.2.6 Y-Axis Drive Motor Replacement	10-4
10.3	X AND Y-AXIS BALLSCREWS	10-4
	10.3.1 X-Axis Ballscrew Assembly Replacement	10-4
	10.3.2 Y-Axis Ballscrew Replacement	10-7
10.4	LIMIT SWITCHES	10-7
	10.4.1 X-Axis Limit Switch Replacement	10-7
	10.4.2 Y-Axis Limit Switch Replacement	10-7
10.5	TABLE AND SADDLE	10-9
	10.5.1 Removal of the Table	10-9
	10.5.2 Removal of the Saddle	10-10
	10.5.3 Manual Machine Motion	10-10
10.6	MANUALLY OPERATED KNEE DRIVE	10-11
	10.6.1 Dial Replacement	10-11
	10.6.2 Elevating Crank Shaft Removal	10-11
	10.6.3 Cylinder and Pedestal Replacement	10-11
	10.6.4 Knee Elevating Screw Replacement	10-13
	10.6.5 Cylinder Gasket Replacement	10-13
	10.6.6 Packing Cup Replacement	10-13
	10.6.7 Leadscrew Bearing (Cylinder End) Replacement ..	10-13
	10.6.8 Leadscrew and Nut Replacement	10-13
	10.6.9 Knee Removal	10-13
10.7	GIB ADJUSTMENT	10-14
11	HEAD ASSEMBLY	11-1
	11.1 LUBRICATION	11-1
	11.2 POWER TRANSMISSION	11-1
	11.2.1 Resetting Speed Control	11-1
	11.2.2 Head Removal	11-1
	11.2.3 Motor Removal	11-3
	11.2.4 Vari-Drive Belt Replacement	11-5
11.3	QUILL AND SPINDLE	11-5
	11.3.1 Spindle Locknut	11-5
	11.3.2 Spindle Removal	11-5
	11.3.3 Quill Drive Motor Replacement	11-6
	11.3.4 Quill Drive Belt Adjustment	11-6
	11.3.5 Quill Drive Belt Removal	11-6
	11.3.6 Ball Quill Extension Removal	11-8
	11.3.7 Quill Removal	11-9
11.4	SETTING Z HOME AND QUILL LIMIT SWITCHES	11-9
11.5	ALIGNMENT OF QUILL HSG. TO DRIVE MTR. HSG.	11-9
11.6	BALL QUILL EXTENSION INSPECTION	11-11
	11.6.1 Ball Quill Extension Preload Torque on Nut	11-11
	11.6.2 Cleaning and Flushing Ball Quill Ext. Assy.	11-12
11.7	REMOVAL OF SPEED CHANGER	11-13
11.8	REMOVAL OF BRAKE LOCK	11-13
12	AUXILIARIES	12-1
	12.1 INTRODUCTION	12-1
	12.2 PNEUMATIC SYSTEM	12-1
	12.2.1 Speed Changer and Brake	12-1
	12.2.2 Knee Counterbalance	12-3
	12.3 LUBRICATION SYSTEM	12-3
	12.4 COMPRESSED AIR FILTER	12-7
	12.5 MINIATURE FILTER REGULATOR	12-8

TABLE OF CONTENTS

(Continued)

Chapter		Page
	12.6 PRESSURE REGULATOR	12-12
	12.7 MINIATURE MICRO-FOG LUBRICATOR	12-14
	12.8 PNEUMATIC REGULATOR (KNEE)	12-17
13	OPTIONAL EQUIPMENT	13-1
	13.1 INTRODUCTION	13-1
	13.2 PAPER TAPE READER	13-1
	13.3 EZ-FILE	13-1
	13.4 #30 QUICK CHANGE TOOL KIT	13-1
	13.5 I-4 INDEXER	13-1
	13.6 COOLANT SYSTEM — MIST AND/OR FLOOD	13-1
	13.6.1 Ratings	13-1
	13.7 EZ-CAM™	13-2
APPENDIX A — SYSTEM SPECIFICATIONS		
	A.1 OVERVIEW	A-1
	A.2 STD. FEATURES OF THE SERIES II R2C3	A-1
	A.3 CONTROL FEATURES	A-1
	A.4 TOTAL SYSTEM FEATURES	A-2
	A.5 LEADING DATA (SERIES II R2C3)	A-2
APPENDIX B — STATIC SENSITIVE EQUIPMENT		
	B.1 STATIC SENSITIVE MATERIALS	B-1
	B.2 GENERAL GUIDELINES	B-1
	B.2.1 Equipment Required	B-1
	B.2.2 Procedure	B-1
	B.3 VENDOR INFO. — STATIC PROTECTION EQUIP.	B-1
APPENDIX C — COMMUNICATION STANDARDS		
	C.1 INTRODUCTION	C-1
	C.2 INPUT/OUTPUT PORTS	C-1
	C.3 COMMUNICATIONS CABLES	C-1
	C.4 TELETYPE CONNECTION	C-1
	C.4.1 Teletype Conversion	C-1
	C.4.2 Setting The Baud Rate	C-3
	C.5 R2C3 DOWNLOAD FROM EZ-FILE	C-3
	C.6 COMM. PROCEDURES — EZ-CAM II & TNC 145	C-3

LIST OF ILLUSTRATIONS

Figure		Page
1-1	Series II R2C3 with Heidenhain Control	1-1
2-1	Overall Dimensions	2-1
2-2	Side Elevation and Table Layout	2-2
2-3	Machine Base Layout	2-2
2-4	Installation Plan View	2-2
2-5	Center of Gravity	2-3
2-6	Overhead Hoist	2-3
2-7	Series II CNC Machine Leveling	2-4
2-8	Auxiliary Subsystem Enclosure	2-4

LIST OF ILLUSTRATIONS

(Continued)

Figure		Page
2-9	X-Axis Head Trimming	2-5
2-10	Pinning the Head to the Ram	2-6
2-11	Power Equipment Enclosure	2-7
3-1	Series II R2C3	3-1
3-2	Column Knee Clamps	3-2
3-3	Knee Drive Transmission	3-2
3-4	Spindle Drive Transmission	3-2
3-5	The Milling, Drilling and Boring Head	3-3
3-6	R2C3 Series II System — Functional Block Diagram	3-4
3-7	Operator's Control Panel	3-5
3-8	Auxiliaries Cabinet Assembly	3-5
4-1	Power Distribution — Functional Block Diagram	4-2
5-1	Board Arrangement	5-1
5-2	Block Diagram TNC-145	5-2
5-3	Layout of Multipoint Terminals	5-5
5-4	Processor Board	5-6
5-5	Display Board	5-7
5-6	Identification Plates	5-7
6-1	Block Diagram, Axis Drive	6-1
6-2	DC Servo Motor	6-2
6-3	X & Y Axis Drive Transmission	6-2
6-4	X-Axis Limit Switch Locations	6-3
6-5	Y-Axis Limit Switch Location	6-3
6-6	Z-Axis Drive	6-3
6-7	Z-Axis Limit Switches	6-3
6-8	Axis Drive Connection Diagram	6-3
6-9	General Arrangement, Bosch Amplifier	6-5
6-10	Component Locations, Bosch Amplifier	6-6
6-11	Bosch Amplifier	6-7
6-12	Bosch Amplifier, Speed Error Signal	6-8
6-13	Bosch Amplifier, Thyristor Firing Control Circuit	6-8
6-14	Bosch Amplifier, Power Bridge	6-9
7-1	Troubleshooting Flow Chart	7-2
7-2	Electrical Panel	7-4
7-3	Overload Relay Reset Switch	7-6
9-1	Battery Location	9-6
10-1	X-Axis Drive Assembly	10-2
10-2	Timing Belt Tensioning	10-2
10-3	Y-Axis Drive Assembly	10-3
10-4	Taper Lock Bushing Installation	10-4
10-5	Field Alignment of X-Axis Ballscrew	10-6
10-6	X-Axis Limit Switch Assembly	10-8
10-7	Y-Axis Limit Switch Installation	10-8
10-8	Table Removal and Installation	10-9
10-9	Table and Cross Slide Feed Control	10-10
10-10	Saddle Installation	10-10
10-11	Knee Elevating Crank Assembly	10-11
10-12	Knee Pedestal and Cyclinder	10-12
10-13	Removal of Knee	10-14
10-14	Gib Locations	10-15
10-15	Knee Guiding Gib Adjustment	10-16
10-16	Knee to Column Gib Adjustment	10-16
10-17	Y-Axis Gib Setting	10-17
10-18	X-Axis Gib Setting	10-17
11-1	Setting Speed Control	11-1
11-2	Head Removal	11-2
11-3	Special Tool ST-6921 Headlift Bracket	11-2
11-4	Motor Removal	11-3
11-5	Vari-Drive and Timing Belt	11-4

LIST OF ILLUSTRATIONS

(Continued)

Figure		Page
11-6	Quick Change Locknut Assembly	11-5
11-7	Spindle Removal	11-7
11-8	Quill Drive	11-7
11-9	Ball Quill	11-8
11-10	Quill Limit Switches	11-9
11-11	Setting Z Home and Quill Switches	11-10
11-12	Ball Quill Extension Torque on Nut Setup	11-11
11-13	Ball Quill Extension Flushing	11-12
11-14	Ball Quill and Nut Flushing	11-12
11-15	Speed Changer Drum Assembly	11-13
11-16	Pneumatic Brake	11-14
12-1	Pneumatic Diagram	12-1
12-2	Knee Pedestal	12-2
12-3	Automatic Lubricator	12-3
12-4	Schematic Pneumatic Regulator	12-17
12-5	Mounting Dimensions	12-18
C-1	ARS-33 Teletype	C-1
C-2	Modifications to Teletype	C-2
C-3	Transmission Connections	C-3

LIST OF TABLES

Table		Page
4-1	Overload Heaters	4-3
4-2	Fuse Chart	4-3
C-1	20 mA Cables	C-1
C-2	RS-232 Cables	C-1